


Project Guide

Pattern Frit Painting ▪ picture in glass

Glass Cutting: **simple straight lines**

Firings: **full or tack fuse, slump optional**

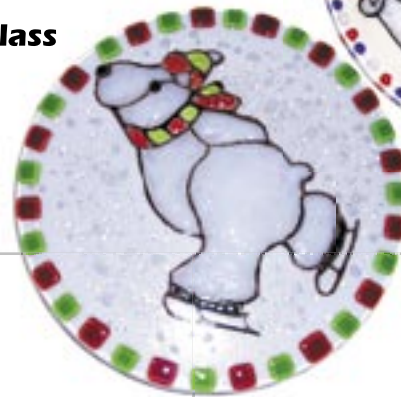

Step-by-Step

1. Select any pre-existing glass pattern or design your own. Go to www.SpectrumGlass.com/stainedglass.html, click on the "Free Patterns" link to find hundreds of great patterns.
2. Place the appropriate-sized clear Blank on top of the pattern and trace the outlines with Glassline paints.
3. Allow to dry, then sprinkle any size of Frit into each individual "cell" created by the outline. Use plenty of Frit!
4. With a small brush, tidy up any stray Frit, being careful not to brush away your paint outlines.
5. Sprinkle bits of Frit in the background, and decorate with a border of Chips or Rod Dots.
6. If appropriate to your design, add bits of contrasting glass on top of the Frit for details such as eyes.

Materials We Used

Blank: 8" Round clear

Frit: various colors and particle sizes


Chips: 16 red, 16 green

Rod Dots: 22 blue, 22 red, 22 white

Note:

Chips = 1/2" glass squares

Rod Dots = Create "Rod Dots" by nipping the Rod into 1/4" or shorter pieces with glass nippers.

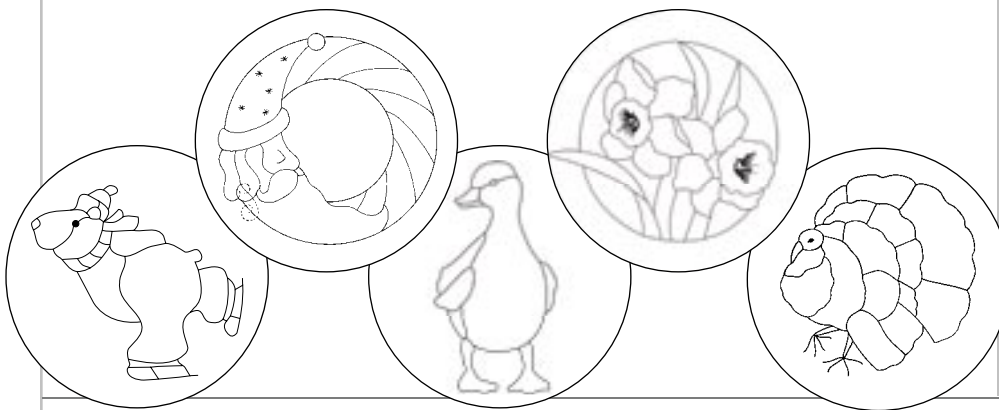

← For **FREE PATTERNS**, visit:
www.spectrumglass.com

The Law of Diminishing Frit

Don't rely on your intuition when applying Frit—you may need more than you think, especially when FULL-fusing a space filled with Coarse. That's because as it melts, the molten glass will settle into the air spaces to form a compact, smooth solid. Make sure you pile on a healthy mound of Frit